

## User Manual

**Tri-folding Wireless Keyboard with Touchpad**

**IC-BK08**

**English**

**Package Contents**

- 1 x Tri-folding Wireless Keyboard
- 1 x Type-C Charging Cable
- 1 x Stand Holder for Smartphone and Tablet
- 1 x Flannel Bag
- 1 x User Manual


**Specifications**

Connectivity	Bluetooth Low Energy
Key Numbers	63
Dimensions (Open)	10.95 × 3.57 × 0.51 in
Dimensions (Folded)	6.21 × 3.57 × 0.59 in
Weight	200g +/- 10g
Connected Devices	Up to 3
Compatibility	Tablet/Smartphone/iPad/Laptop
Power	210 mAh / 2-Hour Charge
Working Time (Touchpad Off)	90 Days (based on 2 hours per day)
Sleep Time	30 Minutes
Material Used	Aluminum Frame, ABS Hinge
Key Structure	Scissor Switch
Frequency Band	2402MHz-2480MHz
Maximum Transmission Power	0 dBm

**Contact**

iclever products come with a 1-year limited warranty. If you encounter any issues, please contact us at support@iclever.com

**Indicator Lights Description**

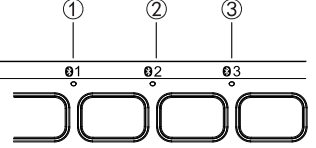

**Power On**  
When you unfold the keyboard to the left and right, indicators ① ② ③ will light up blue for 3 seconds, indicating the keyboard is powered on.


**Charging**  
While charging, indicator ① lights up red. The light will turn off automatically when the keyboard is fully charged.

**Low Battery**  
When indicators ① ② ③ keep flashing, the battery level is low. Please recharge the keyboard promptly.

**Bluetooth Pairing**  
When entering pairing mode, indicators ① ② ③ will flash blue. After pairing is successful, the indicator lights will turn off automatically.

**Balance Stand**

Please open the balance stands on both sides when placing the keyboard flat on a desk.

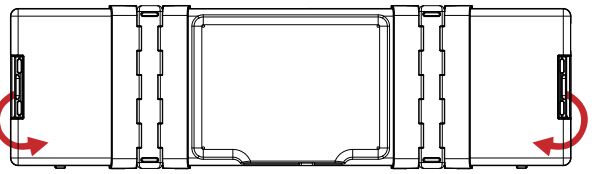

**Pairing Instruction**

**A. How to pair with Bluetooth devices?**

Step 1. Unfold the keyboard to power it on. Indicators ① ② ③ will light up blue for 3 seconds.

Step 2. Press **[e1] [e2] [e3]** once to select Bluetooth Channel 1, 2, or 3. Each channel can be paired with one device.

Step 3. Press and hold **[e1] [e2] [e3]** for 5 seconds to enter pairing mode. The selected indicator will flash blue.

Step 4. On your device, find **"iclever BK08 KB"** and select it to connect.

**How to Find "iclever BK08 KB" on Different Systems**

**For Windows 10:**  
Win key → Settings → Devices → Bluetooth & other devices → Add Bluetooth or other device → Bluetooth → select "iclever BK08 KB"

**For macOS (MacBook / iMac)**  
System Preferences → Bluetooth → select "iclever BK08 KB"

**For iOS (iPad / iPhone) & Android**  
Settings → Bluetooth → select "iclever BK08 KB"

**B. How to switch between connected devices?**

Press **[e1] [e2] [e3]** once to switch between paired devices.

**C. How to re-pair a channel that is already paired?**

Press and hold **[e1] [e2] [e3]** for 5 seconds to re-enter pairing mode and pair a new device.

**Notes:**

- The keyboard may appear as a keyboard icon instead of the name "iclever BK08 KB".
- The keyboard automatically reconnects to the last-used device when powered on.
- Do not connect via a Bluetooth adapter.

**Touchpad Instruction**

The touchpad is enabled by default when the keyboard is powered on. **Two modes are available:**

① turn on the touchpad  
② turn off the touchpad

You can switch between modes by pressing **[Fn] + [Touchpad Icon]**

Trackpad Gestures	Gestures	Funcions
	Point & tap	Left-click
	Slide with one finger	Move pointer
	Tap twice with one finger	Right-click
	Slide with two fingers	Move vertically or horizontally
	Pinch in or out	Zoom in or out

**IPad Touchpad Setup (If Not Working)**

For iPad users, if the touchpad does not respond, enable AssistiveTouch as follows: **Settings** → **Accessibility** → **Touch** → **AssistiveTouch** → **ON**

**System Requirements**

- ▶ iPadOS 13.0 or later (iPad)
- ▶ macOS 10.12 or later (MacBook / iMac)
- ▶ Windows 8 or later with Bluetooth HID profile (PC / Laptop / Tablet)
- ▶ Android 9.0 or later (Smartphone / Tablet)

**NOTE:**

- Limited compatibility may occur with Mac mini, Samsung Smart TV, some Nokia devices, or Bluetooth adapters.
- The touchpad is not fully compatible with Bluetooth adapters.

**Keys and Function**

The table below shows special key combinations for iOS/Android/Windows and macOS.

Functions Keys	iOS	Android	Windows	Mac OS	Windows
Way to use	Press Fn +	Press Fn +	Press Fn +	Press Fn +	Press Fn+Shift+
	Home	Home	Web browser	Mission Control	F1
	Search	N/A	Search	Search	F2
	Lightness +	Lightness -	Lightness - (win10)	Lightness -	F3
	Lightness +	Lightness + (win10)	Lightness +	Lightness +	F4
	Previous track	Previous track	Previous track	Previous track	F5
	Play/pause	Play/pause	Play/pause	Play/pause	F6
	Next track	Next track	Next track	Next track	F7
	Mute	Mute	Mute	Mute	F8
	Volume -	Volume -	Volume -	Volume -	F9
	Volume +	Volume +	Volume +	Volume +	F10
	Screen lock	Screen lock	Screen lock	N/A	F11
	Screenshot	Screenshot	Screenshot	Screenshot	F12
	Esc or N/A	Esc or N/A	Esc	Esc	N/A
	Forward delete	Forward delete	Delete	Forward delete	N/A

**FCC Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.


→ Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**IC Caution**

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation de l'appareil est soumise aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'empêcher le fonctionnement.

**Appairage Bluetooth**

Étape 1. Dépliez le clavier pour l'allumer.  
Les voyants ① ② ③ s'allument en bleu pendant 3 secondes.  
Étape 2. Appuyez une fois sur **[e1] [e2] [e3]** pour sélectionner le canal Bluetooth 1, 2 ou 3.  
Étape 3. Maintenez enfoncés **[e1] [e2] [e3]** pendant 5 secondes pour entrer en mode appairage.  
Le voyant sélectionné clignote en bleu.  
Étape 4. Sur votre appareil, sélectionnez « iclever BK08 KB » pour établir la connexion.



## 取扱説明書

**タッチパッド付き三つ折りワイヤレスキーボード**

**IC-BK08**

**日本語**


**パッケージ内容**

- 1 x 三つ折りワイヤレスキーボード
- 1 x Type-C式充電ケーブル
- 1 x 携帯/タブレット用スタンド
- 1 x 収納袋
- 1 x 取扱説明書

**キーボード仕様**

接続方式	Bluetooth
キー数	63
展開寸法	277.99x90.56x13.06 mm
折りたたみ寸法	157.7x90.56x15.08 mm
重さ	200g +/- 10g
接続可能なデバイス数	3
対応システム	iOS/Android/Windows/Mac
電源	210 mAh / 2 時間充電
連続使用時間	>90日
スリープモードに入る時間	30 分間
材質	ABS+アルミニウム合金
キー機構	パンタグラフ式
高波数帯域	2402MHz-2480MHz
最大送信電力	0 dBm

**インジケーター**

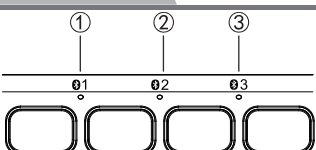

**電源:** キーボードを左右を広げて電源を入れると、インジケーター①②③が 3 秒間青く点灯します。


**充電:** 充電中インジケーター①は赤色で点灯し、フル充電の場合は自動的にオフになります。

**電量不足:** インジケーター①②③が点滅し続ける場合、電池残量が少ないことを示すため、点滅が見られたら充電をしてください。

**Bluetooth:** ペ어링モードに入る時、インジケーター①②③が青色で点滅し続けます。ペアリング成功すると、インジケーターは消灯します。

**バランススタンド**

キーボードのバランスをとるためのバランススタンドが付属しています。

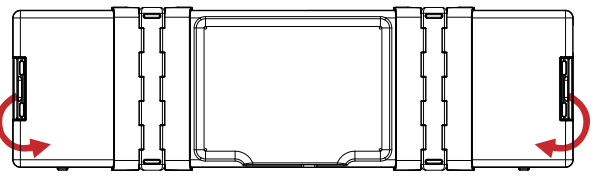

**ペアリングの説明**

**デバイスのペアリング**

- キーボードを左右を広げ、電源を入れてください。インジケーター①②③が3秒間青色に点灯します。
- Bluetoothチャンネル 1/2/3 に入るため、**[e1] [e2] [e3]** を押してください。インジケーター①②③が一回青色に点滅します。
- ペアリングモードに入るため、**[e1] [e2] [e3]** を長押ししてください。インジケーター①②③が赤早く青色に点滅します。
- お使いのデバイスのBluetooth機能を有効にして、検索画面に **[iclever BK08 KB]** をクリックして接続してください。接続されると、インジケーター①②③が青色に消灯します。

**異なるシステムのキーボードと接続**

▶ iPhone/iPad/Android  
[設定] → Bluetooth → [iclever BK08 KB] をクリックして接続します。

▶ Windows 10  
[スタート] → [設定] → [デバイス] → [Bluetooth とその他のデバイス] → [Bluetooth またはその他のデバイスを追加する] → [Bluetooth] → [iclever BK08 KB] をクリックして接続します。

▶ MacBook/iMac  
[アップルメニュー] → [システム設定] → [Bluetooth] → [iclever BK08 KB] をクリックして接続します。

**ご注意:**

- ▶ 本製品には最大 3 つのデバイスとのペアリングできます。
- ▶ **[e1] [e2] [e3]** を押して、切り替えます。
- ▶ チャンネルをデバイスとすでに接続して、他のデバイスと接続したい場合、**[e1] [e2] [e3]** を押して、再度ペアリングモードに入ってください。
- ▶ 各Bluetoothチャンネルは1つのデバイスとのみペアリングできます。
- ▶ 自動接続機能: キーボードの電源をオンすると、最後に使用したデバイスと自動的に接続します。

**タッチパッドの使い方**

[Fn] + **[Touchpad Icon]** キーを同時に押すと、タッチ機能をオフにします。

再度 [Fn] + **[Touchpad Icon]** キーを同時に押すと、タッチ機能をオンにします。

タッチパッド	ジェスチャー	ジェスチャー	機能
	ポイント & タップ	マウス左ボタン	
	1本指スクロール	マウスポインター移動	
	ダブルタップ	マウス右ボタン	
	2本指スクロール	垂直または水平に移動	
	2本指ピンチ	ズームイン/アウト	

iPadを使用の場合:  
OSでキーボードが動作しない場合は、以下の設定を行ってください:  
**設定 > アクセシビリティ > タッチ > AssistiveTouch** → **オンにする**

**対応システム**

- ▶ iOS 13.0以降のiPhoneとiPad (iPad miniを除く)
- ▶ Mac (注: Mac miniとは互換性が悪く、接続できない、または一部機能が使用できないなどの問題が発生する可能性があります。)
- ▶ Windows 8/10/11 のPCとLaptop (注: Bluetooth機能が必要です。)
- ▶ Android 6.0以降のスマートフォンとタブレット

注: Samsung Smart TV, Nokia phones, Linuxデバイス, iPad miniには対応していません。

**キーボード機能**

システム	iOS	Android	Windows	Mac OS	Windows
使い方	fn+を押す	fn+を押す	fn+を押す	fn+を押す	fn+shiftを押す
	ホーム	ホーム	ブラウザのホームページ	ミッションコントロール	F1
	検索	N/A	検索	検索	F2
	明るさアップ	明るさダウン	明るさアップ	明るさダウン	F3
	明るさアップ	明るさアップ	明るさアップ	明るさアップ	F4
	前のトラック	前のトラック	前のトラック	前のトラック	F5
	再生 / 一時停止	再生 / 一時停止	再生 / 一時停止	再生 / 一時停止	F6
	次のトラック	次のトラック	次のトラック	次のトラック	F7
	ミュート	ミュート	ミュート	ミュート	F8
	音量を下げる	音量を下げる	音量を下げる	音量を下げる	F9
	音量を上げる	音量を上げる	音量を上げる	音量を上げる	F10
	スクリーンロック	スクリーンロック	N/A	N/A	F11
	スクリーンショット	スクリーンショット	N/A	N/A	F12
	Esc or N/A	Esc or N/A	Esc	Esc	N/A
	Delete	Delete	Delete	Delete	N/A

**特許キー**

特許キー	説明
<b>[e1]</b>	切り替え機能: 押すとBluetoothチャンネル1に切り替わります。ペアリング機能: 5秒間長押しするとペアリングモードになります。
<b>[e2]</b>	切り替え機能: 押すとBluetoothチャンネル2に切り替わります。ペアリング機能: 5秒間長押しするとペアリングモードになります。
<b>[e3]</b>	切り替え機能: 押すとBluetoothチャンネル3に切り替わります。ペアリング機能: 5秒間長押しするとペアリングモードになります。
<b>[1]</b>	英語(米国)入力方式では、Fn + このキーを押すと「 } 」が入力できます。Fn + Shift + このキーを押すと「 < 」が入力できます。
<b>[0]</b>	英語(米国)入力方式では、Fn + このキーを押すと「 ] 」が入力できます。Fn + Shift + このキーを押すと「 } 」が入力できます。
<b>[P]</b>	英語(米国)入力方式では、Fn + このキーを押すと「 \   」が入力できます。Fn + Shift + このキーを押すと「 }   」が入力できます。
<b>[Touchpad Icon]</b>	このキーは、特殊な機能を実行するために青色のキーと組み合わせで使用される組み合わせキーです。
<b>[Fn]</b>	このキーはWindowsでは「スタート」または「Win」として機能し、iOSおよびMac OSでは「Command」として機能します。
<b>[Fn] + [Touchpad Icon]</b>	OSでキーボード表示として機能させるには、fnキーとこのキーを同時に押してください。
<b>[Fn] + [Home]</b>	fn + 右Altキーを押すとタッチパッドのオン/オフを切り替えます。
<b>[Fn] + [Lightness -]</b>	fn + このキーを押すと、Androidシステムで「戻る」として機能します。
<b>[Fn] + [Lightness +]</b>	fn + このキーを押すと、ウェブブラウザで「Home」として機能します。
<b>[Fn] + [Previous Track]</b>	fn + このキーを押すと、ウェブブラウザで「End」として機能します。
<b>[Fn] + [Play/Pause]</b>	fn + このキーを押すと、ウェブブラウザで「PgUp」として機能します。
<b>[Fn] + [Next Track]</b>	fn + このキーを押すと、ウェブブラウザで「PgDn」として機能します。

**FAQ**

**Q:キーボードと接続できない。**  
ステップ1. 下記の手順に従って操作してください。  
1.キーボードを30分程度充電してください。  
2.Bluetoothのペアリング名はキーボードのアイコンの形式で表示される場合があります。Bluetoothのペアリング名の中で新しく表示されたキーボードのアイコンを見つけ、クリックして接続してください。  
3.お使いのデバイスのBluetooth接続履歴「iclever BK08 KB」を削除してください。削除後、お使いのデバイスを再起動してください。  
4.お使いのデバイスのBluetoothをオフにした後、再度オンにしてください。  
5.ご使用の際に周囲の金属やその他のワイヤレス信号源から遠ざけてください。ステップ2. 「デバイスのペアリング」に従って再接続してください。

**Q:入力のリズムが遅くなる。または、頻りにBluetoothデバイスとの接続を切断される。**  
1.お使いのデバイスとキーボードの距離をできるだけ近づけてください (30cm以内)  
2.ご使用の際に周囲の金属やその他のワイヤレス信号源から遠ざけてください。  
(例) 以下のものから遠ざけるようにしてください。  
---無線電波を放出するデバイス (電子レンジ、コードレス電話、ペーパークレーン等)  
---強いWi-Fi信号  
---金属または筐内の金属配線  
3.キーボードを30分程度充電してください (バッテリー残量が少なくない、接続性と全体的な機能に影響が出る場合があります)。  
4.遅延の原因となる更新プログラムのバックグラウンドで実行されていないかを確認してください。  
5.オペレーティングシステム (OS) が最新であることを確認してください。  
6.同様の問題が起こるか、別のコンピュータ/スマートフォン/タブレットで接続と入力をお試しください。

**カスタマーサービス**

メール: support@iclever.co.jp